

www.RadioShack.com

Contributed by Y.Kwon
Thursday, 12 February 2009

RadioShack Corp. is recalling about 25,000 of its Child Guidance toy pliers. The toy's sliding yellow knob can detach, posing a choking hazard to young children.

RadioShack has received three reports of the sliding yellow knob on these toys detaching. In two of these reports, children were found to be mouthing these knobs. No injuries have been reported.

The recall involves the Child Guidance "Busy Baby Activity Tool Pliers," which are about 6-inches long. The plastic toy has an orange handle, a red center knob and a yellow sliding knob on the side. The red center knob has "child GUIDANCE" written on it.

The battery-operated toy makes various electronic sounds, plays music and has flashing lights. The pliers also contain multicolored beads. A label on the back reads, "RadioShack."

The pliers were sold at RadioShack stores nationwide and the RadioShack Web site from August 2004 through February 2006 for about \$6.

Consumers should take these toy pliers away from children and return them to any RadioShack store for a refund.

Consumer Contact: For additional information, contact RadioShack at (800) 843-7422 anytime, or go to the firm's Web site at www.radioshack.com.

The recall is being conducted in cooperation with the U.S. Consumer Product Safety Commission (CPSC).